


ENGINE OIL LEVEL SWITCH


1. Remove:
 - Oil level gauge ①

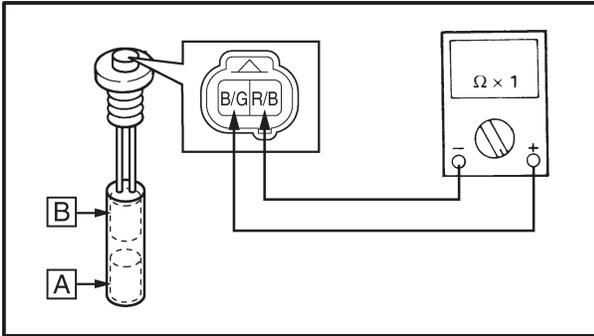

2. Connect:
 - Pocket tester (to the oil level switch coupler)
3. Inspect:
 - Oil level switch continuity
 Faulty → Replace.


	Switch position	Good condition	Bad condition	
A	Down position	○	×	×
B	Up position	×	○	×

○ : Continuity × : No continuity

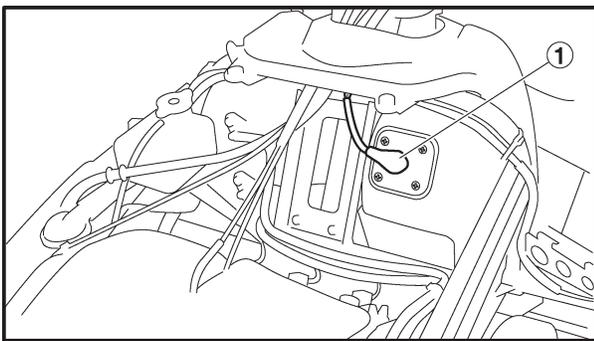

FUEL SENDER

1. Remove:
 - Intake silencer
 - Refer to “FUEL PUMP” in CHAPTER 7.
 - Fuel sender ① (from the fuel tank)
2. Connect:
 - Pocket tester (to the fuel sender coupler)

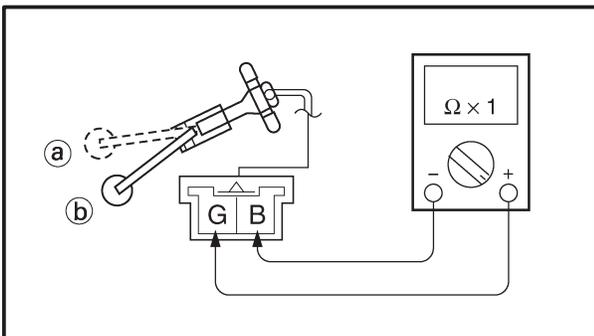

3. Measure:
 - Full ①
 - Empty ②
 - Fuel sender resistance
 Out of specification → Replace.

	Fuel sender resistance (full): 4 ~ 10 at 20°C (68°F)
	Fuel sender resistance (empty): 90 ~ 100 at 20°C (68°F)