


- Reinstall the dipstick ①.

NOTE:

Align the notch ② of the dipstick handle with the projection ③ of the drive chain housing.

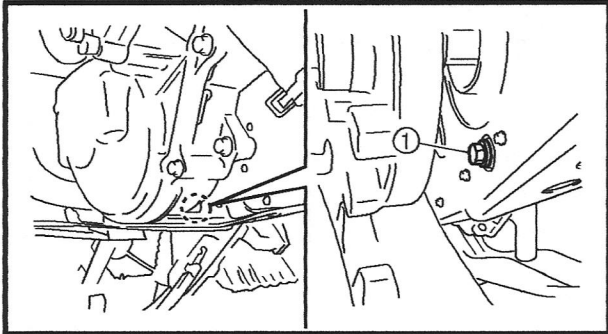

Oil replacement

Oil replacement steps:

- Place the oil pan under the drain hole.
- Remove the oil drain bolt (along with the gasket) ① and drain the oil.

CAUTION:

Be sure to remove any oil from the heat protector.


- Install the new gasket and oil drain bolt ①.



Oil drain bolt:
16 Nm (1.6 m · kg, 11 ft · lb)



Recommended oil:
Gear oil "GL-3"
75W or 80W
Oil capacity:
0.25 L (0.22 Imp qt, 0.26 US qt)

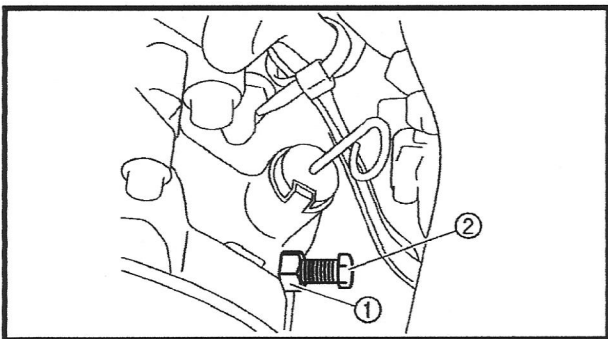

Chain slack adjustment

1. Adjust:
 - Drive chain slack

Adjustment steps:

- Loosen the locknut ①.
- Turn the adjusting bolt ② clockwise until it is finger tight, and then loosen it 1/4 turn.
- Hold the adjusting bolt ② in place while tightening the chain adjusting locknut ①.



Drive chain adjusting locknut:
25 Nm (2.5 m · kg, 18 ft · lb)