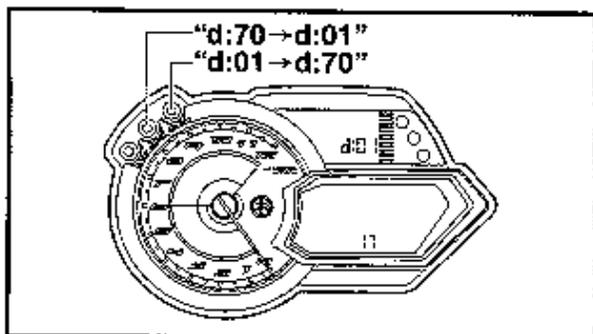
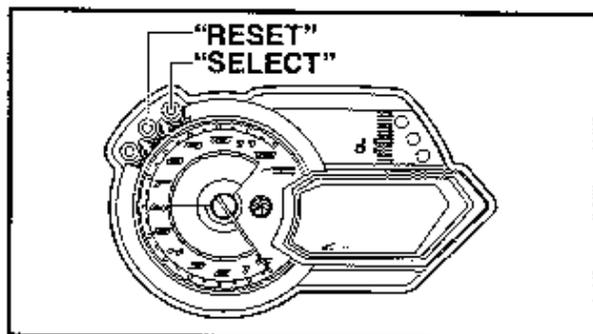


**DIAGNOSTIC MODE**

It is possible to monitor the sensor output data or check the activation of actuators without connecting the measurement equipment by simply switching the meter indication from the normal mode to the diagnostic monitoring mode.

**Setting the diagnostic mode**

1. Turn the main switch off and set the engine stop switch to "RUN".
2. Disconnect the wire harness coupler from the fuel pump.
3. Simultaneously press and hold the "SELECT" and "RESET" buttons, turn the main switch on, and continue to press the buttons for 8 seconds or more.

TIP

- All displays on the LCDs disappear except the clock display.
- "dl" appears on the clock display.

4. Check that "dl" appears, and then simultaneously press the "SELECT" and "RESET" buttons for 2 seconds or more to activate the diagnostic mode. The diagnostic code number "d:01" appears on the clock display.
5. Select the diagnostic code number corresponding to the fault code number by pressing the "SELECT" and "RESET" buttons.

TIP

- To decrease the selected diagnostic code number, press the "RESET" button. Press the "RESET" button for 1 second or longer to automatically decrease the diagnostic code numbers.
- To increase the selected diagnostic code number, press the "SELECT" button. Press the "SELECT" button for 1 second or longer to automatically increase the diagnostic code numbers.