



6. Verify the operation of the sensor or actuator.
 - Sensor operation
The data representing the operating conditions of the sensor appears on the odometer/tripmeter/fuel reserve tripmeter/oil change tripmeter/display.
 - Actuator operation
Push the grip warmer side of the grip/thumb warmer adjustment switch to operate the actuator.
If the grip warmer side of the switch is pushed again while the actuator is operating, the actuator operation will stop and restart from the beginning.
7. Turn the main switch off to cancel the diagnostic mode.

TIP

To perform a reliable diagnosis, make sure to turn off the power supply before every check and then start right from the beginning.