





- i. Check that the $\varnothing 4$ pin (93604-29184) can be inserted into the boss of the EXUP valve housing. If the rod cannot be inserted, repeat the procedure from step (a).
- j. Tighten the locknut, and then restore the rubber cover to its original position.
- k. Activate the diagnostic mode and select the diagnostic code number d: 53.
Refer to "DIAGNOSTIC MODE".
- l. Again, check that the $\varnothing 4$ pin (93604-29184) can be inserted into the boss of the EXUP valve housing. If the rod cannot be inserted, repeat the procedure from step (a).

TIP

The center of the notch of the EXUP valve pulley and the center of the boss of the EXUP valve housing may be misaligned up to 2 mm (0.08 in).

(k) 2 mm (0.08 in)

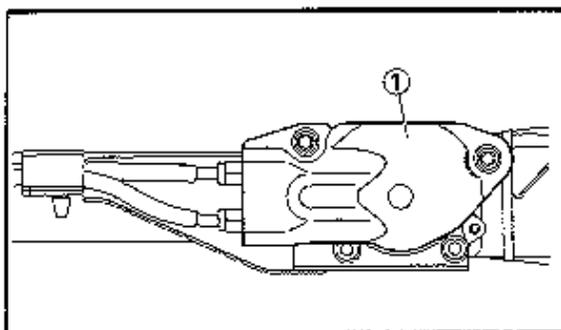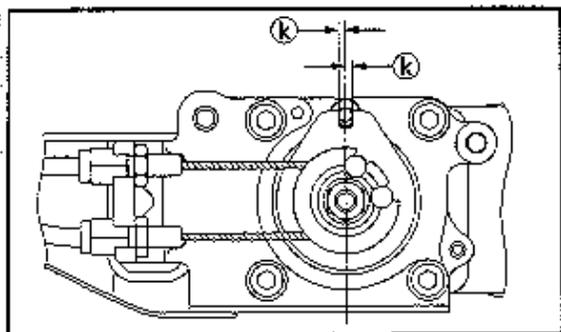

5. Install:
 - EXUP valve pulley cover ①



EXUP valve pulley cover bolt:
10 Nm (1.0 m•kgf, 7.2 ft•lbf)

6. Install:
 - Fuel tank
Refer to "FUEL TANK" in CHAPTER 5.
 - Seat
 - Left side cover
Refer to "COWLINGS" in CHAPTER 3.