



Fig. 43 ELECTRICAL 1

Ref. No.	Part No.	Part Name	Remarks
1	8GC-8591A-10	ENGINE CONTROL UNIT ASSY	1
2	27A-92131-00	BAND, BATTERY	1
3	8FP-82310-00	IGNITION COIL ASSY	2
4	95812-06025	BOLT, FLANGE	2
5	8GC-88886-00	SENSOR, CAM POSITION	1
6	90110-06175	BOLT, HEXAGON SOCKET HEAD	1
7	8FP-82504-00	OIL PRESSURE SWITCH ASSY	1
8	8GC-85780-00	SENSOR, KNOCK	1
9	8GC-81515-00	LEAD WIRE ASSY	1
10	1D7-81960-00	RECTIFIER & REGULATOR ASSY	1
11	95602-06200	NUT, SELF-LOCKING	2
12	90387-06M45	COLLAR	2
13	8GN-82580-20	WIRE HARNESS ASSY	1
14	5PS-82151-00	FUSE (40A)	1
15	5JJ-82151-10	FUSE (15A-BL)	2
16	5JJ-82151-20	FUSE (20A-BL)	3
17	5JJ-82151-00	FUSE (7.5A-BL)	2
18	5JJ-82151-40	FUSE (4A-BL)	2
19	5JJ-82151-50	FUSE (3A-BL)	2
20	4WA-81980-00	DIODE ASSY	1
21	90464-12045	CLAMP	2
22	90464-15195	CLAMP	13
23	90464-13073	CLAMP	10
24	90464-16001	CLAMP	1
25	90464-20181	CLAMP	2
26	SDM-81950-00	RELAY ASSY	3
27	8FP-81950-01	RELAY ASSY	4
28	8FA-82510-00	MAIN SWITCH ASSY	1

*

Tech recommends to replace both middle and rear (2 #22's)

Replaces part no. 8145-81950-09