


Parts List

Item	Qty
Saver Plate Halve	2
Upper & Lower Mounting Bolts	4
Flat washers	4
Lock Nuts	4
Linkage Arm Assembly	1

Part Identification

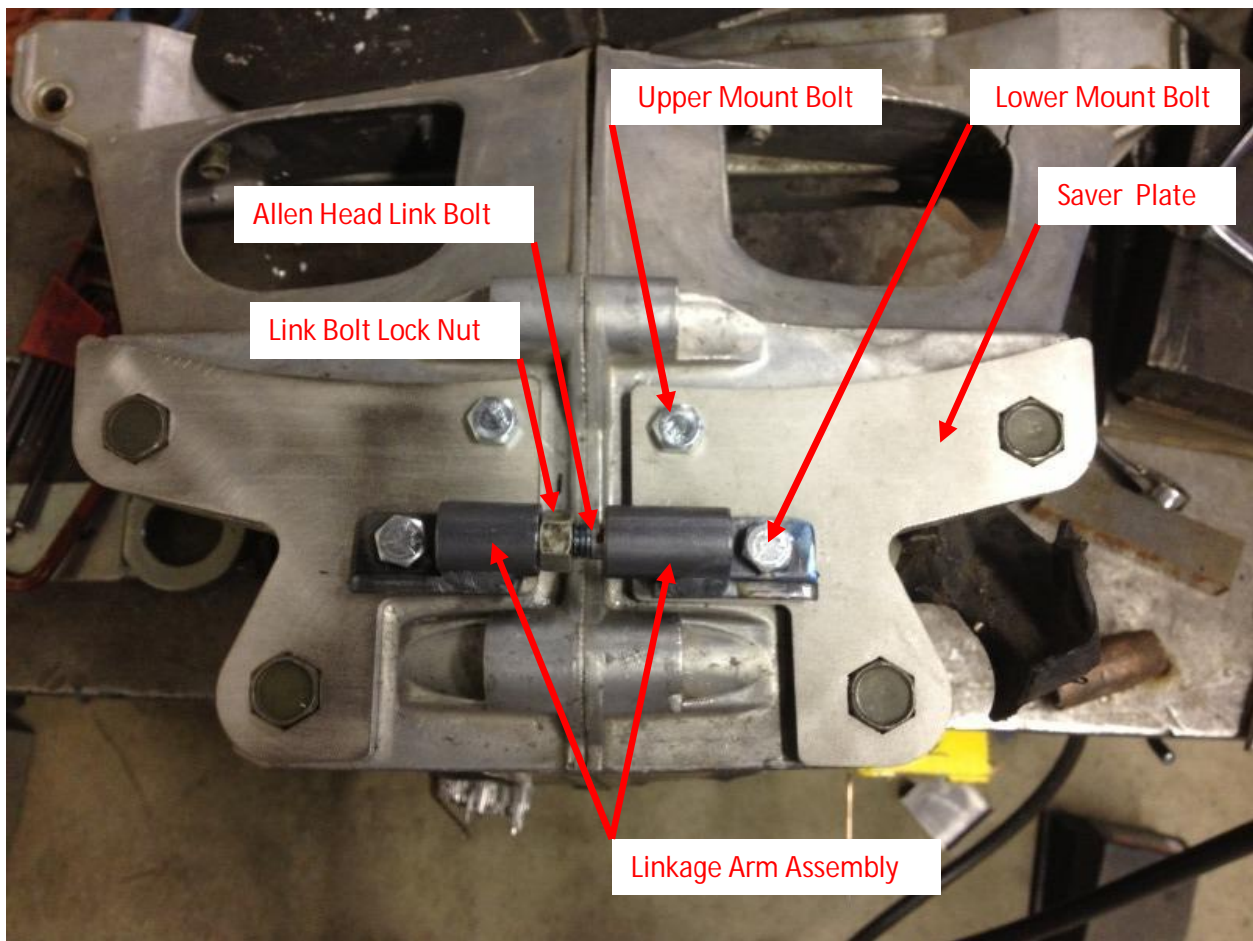

Installation Instructions

1. Remove the (8) Philips Pan Head screws that secure the front nose cone
2. Next remove air box on sleds equipped with a tool box in the nose. Then proceed to remove the tool box. If your sled is not equipped with a tool box simply just remove the cover plate in its place.

3. Install one of the saver plate halves onto the bulkhead. The a-arm bolt heads will have to be rotated accordingly so they match up with the saver plate.
4. Using a drill with 5/16" drill bit, drill through the upper mounting hole into bulkhead.
5. Place an upper mounting bolt through the hole just drilled. Install flat washer and lock nut on backside and tighten to XX ft lbs.
6. Drill the lower mounting hole with the 5/16" drill bit.
7. Repeat steps 5 and 6 for the opposite side.
8. Adjust the allen head link bolt accordingly so each end of the linkage arm can be bolted to the lower mounting hole.
9. Install the linkage arm using 5/16" bolts with flat washer and nut on backside. Lightly snug these bolts to XX ft lbs
10. Lightly tighten the allen head link bolt just enough to take out all the slack and play.
11. When all slack is removed tighten the link bolt lock nut
12. Tighten and torque the lower mounting bolts to xx ft lbs.